


Sec. #1 panels have the bottom horizontal rail built parallel to the angle of this slope.

Sec #2 panels have the bottom horizontal rail built to the different angle of the slope.

PROWELL Woodworks
800.466.1850

OPTION #B--PARTIAL BIAS

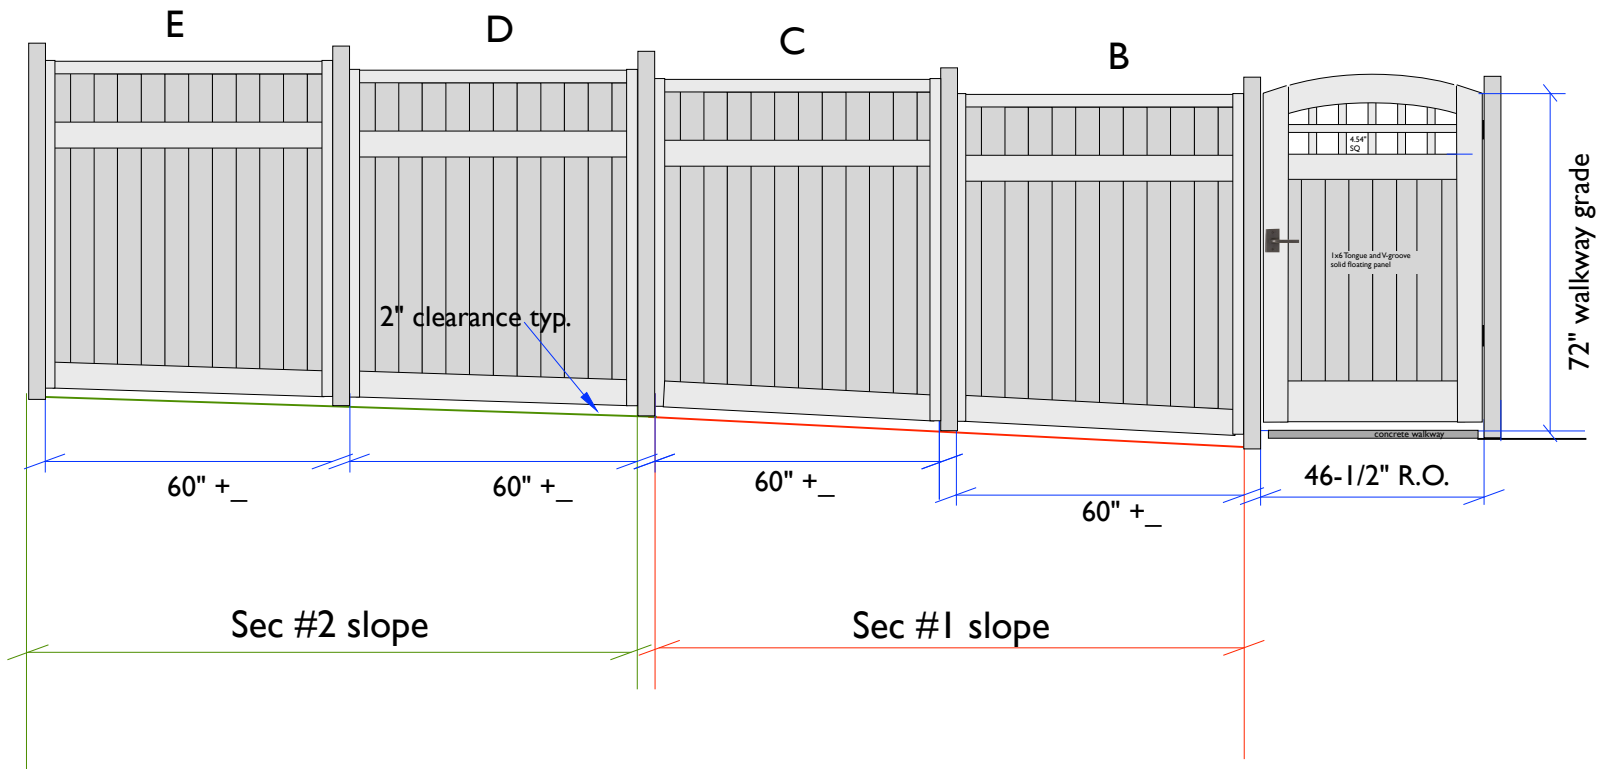

Required measurements

