


NOTES: Motor arm is at 18-1/2" from grade? Concrete motor footing is formed such that the motor arm mounts to the center of the 3rd rail from the bottom, at 21". (To be field verified)

PO#2539 North Shore Preserve Ventures.

Set #2. One pair of gates (2 singles)

Typ left gate viewed from property side

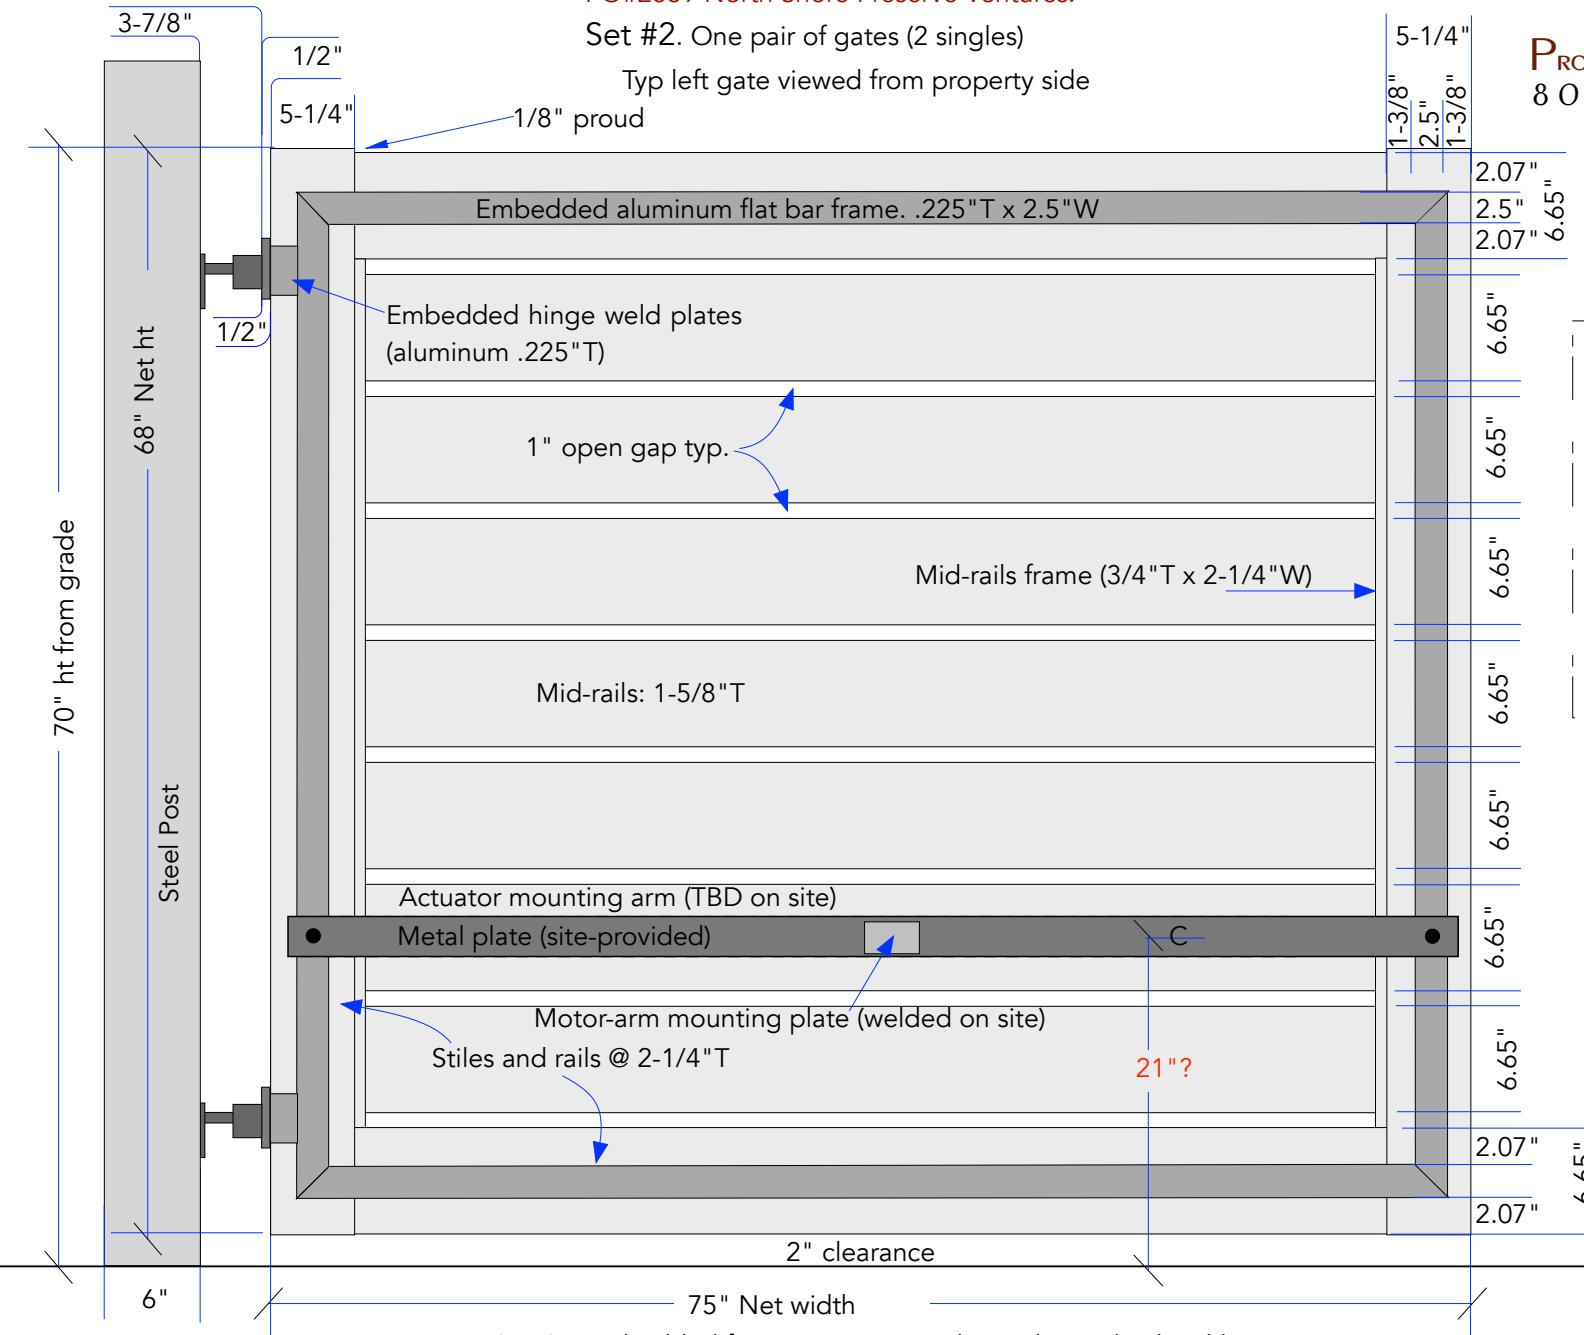

PROWELL Woodworks
8 0 0 . 4 6 6 . 1 8 5 0

SET #2

Page 3

Dated Dec 29, 2025

NOTES: *Embedded frames are centered on stiles and rail widths

* The height placement of the motor-arm mounting plate to be field verified.